

Industrial Computer Source

Product Manual

Model EXM-18

Reference Manual

MANUAL NO. 41417-142-01A

Industrial Computer Source 10180 Scripps Ranch Blvd., San Diego, CA 92131 (619) 271-9340

Industrial Computer Source France (1)69.07.28.22 Industrial Computer Source Asia Pte. Ltd. 65-749-0800
Industrial Computer Source (UK) Ltd. 0243-533900 Industrial Computer Source (Deutschland) GmbH (2234)

This page intentionally left blank.

FORWARD

This instruction manual provides the necessary user information for the referenced product(s) manufactured or distributed by Industrial Computer Source for the user to install, operate and/or program the product properly. Please refer to the following pages for information regarding the warranty and repair policies.

Technical assistance is available at (619) 271-9340.

Manual Errors, Omissions and Bugs: A Bug Sheet is included as the last page of this manual. Please use it if you find a problem with the manual you believe should be corrected.

NOTICE

The information in this document is provided for reference only. Industrial Computer Source does not assume any liability arising out of the application or use of the information or products described herein. This document may contain or reference information and products protected by copyrights or patents and does not convey any license under the patent rights of Industrial Computer Source, nor the rights of others.

Printed in the U.S.A. Copyright© 1993 by Industrial Computer Source, a California corporation, 10180 Scripps Ranch Blvd., San Diego, CA 92131. All rights reserved.

This page intentionally left blank.

INDUSTRIAL COMPUTER SOURCE GUARANTEE, LIMITED WARRANTY AND RETURN POLICY

***LIMITED WARRANTY:** One year limited warranty on all products sold with the exception of the "Performance Series" I/O products, which are warranted to the original purchaser for as long as they own the product, subject to all other conditions below, including those regarding neglect, misuse and acts of God. Within one year of purchase, we will repair or replace, at our option, any defective product sold by us. At any time after one year, we will repair or replace, at our option, any defective "Performance Series" I/O product sold by us. This does not include products damaged in shipment, or damaged through customer neglect or misuse.

The Return Procedure below must be followed to assure repair or replacement. We will normally return your replacement or repaired item via UPS Blue. Overnight delivery or delivery via other carriers is available at additional charge.

The limited warranty is void if the product has been subjected to alteration, neglect, misuse, or abuse; if any repairs have been attempted by anyone other than Industrial Computer Source or its authorized agent; or if the failure is caused by accident, acts of God, or other causes beyond the control of Industrial Computer Source or the manufacturer. Neglect, misuse, and abuse shall include any installation, operation, or maintenance of the product other than in accordance with the owners' manual.

No agent, dealer, distributor, service company, or other party is authorized to change, modify, or extend the terms of this Limited Warranty in any manner whatsoever. Industrial Computer Source reserves the right to make changes or improvements in any product without incurring any obligation to similarly alter products previously purchased.

***GUARANTEE:** Thirty day money-back guarantee on all standard products sold. Special order products are covered by our Limited Warranty, however they may not be returned for refund or credit.

REFUNDS: In order to receive a full refund of product purchase price, the product must not have been damaged by the customer or by the common carrier chosen by the customer to return the goods, and the product must be returned complete (meaning all manuals, software, cables, etc.) within 30 days of receipt and in as-new and resalable condition. **RETURN PROCEDURE** below must be followed to assure prompt refund.

RESTOCKING CHARGES: Product returns after 30 days, and before 90 days, after purchase will be subject to a minimum 20% restocking charge and any charges for damaged or missing parts.

Products not returned within 90 days of purchase, or products which are not in as-new and resalable condition, are not eligible for credit return and will be returned to the customer.

RETURN PROCEDURE: For any Limited Warranty or Guarantee return, every product returned to Industrial Computer Source for service or credit must be accompanied by a Return Material Authorization (RMA) Number, obtained from Industrial Computer Source Customer Service, (619) 271-9340, prior to its return. Freight on all returned items must be prepaid by the customer and customer is responsible for any loss or damage caused by common carrier in transit. Returns for warranty must include a failure report for each unit, by serial number as well as a copy of the original invoice showing date of purchase.

To reduce risk of damage, returns of product must be in an Industrial Computer Source shipping container. If the original container has been lost or damaged, new shipping containers may be obtained from Industrial Computer Source Customer Service at a nominal cost.

SHIPMENTS NOT IN COMPLIANCE WITH THIS GUARANTEE AND LIMITED WARRANTY RETURN POLICY WILL NOT BE ACCEPTED BY INDUSTRIAL COMPUTER SOURCE.

LIMITATION OF LIABILITY: In no event shall Industrial Computer Source be liable for any defect in hardware or software or loss or inadequacy of data of any kind, or for any direct, indirect, incidental, or consequential damages in connection with or arising out of the performance or use of any product furnished hereunder. Industrial Computer Source liability shall in no event exceed the purchase price of the product purchased hereunder. The foregoing limitation of liability shall be equally applicable to any service provided by Industrial Computer Source or its authorized agent.

* Some sale items and custom systems are not subject to the guarantee and limited warranty above, however in these instances any deviations will be disclosed prior to sale and noted on the original invoice. We reserve the right to refuse returns or refunds on software or special order items.

This page intentionally left blank.

TABLE OF CONTENTS

DESCRIPTION	
SPECIFICATIONS	1
INSTALLATION	
INSERTION IN AN EXM CARRIER	3
CONFIGURING THE BIOS SETUP	3
Enabling the EXM module	4
OPERATION	
CONNECTORS	8
ILLUSTRATIONS	
Figure 1 EXM SLOT NUMBERING	4

REVISION HISTORY

March, 1993 Initial Release

This page intentionally left blank.

CHAPTER I

DESCRIPTION

This manual contains the information you will need to install and use the EXM-18 parallel and serial I/O expansion module.

The EXM-18 is an expansion module containing a single PC compatible parallel port and a PC compatible serial port. There are two different versions of the EXM-18; one has an RS-232 serial port and the other has RS-422. The serial port standard for each card is clearly labeled on the front panel to the left of the serial port. Throughout this manual, sections that refer to both versions of the expansion module will refer generically to the EXM-18. For those sections specific to each version, that section will refer to the particular serial standard.

The EXM-18 is fully software configurable via the setup screen allowing the user to enable or disable the card and select the I/O address and interrupt level for each port.

SPECIFICATIONS

The following table defines the environmental and power specifications of the EXM-18.

		Value
Environmental		
Temperature	operating	0 to 60 C. (* see below)
	storage	-40 to 125 C.
Humidity	operating	0 - 95% (non-condensing)
	storage	0 - 95% (non-condensing)
Vibration	operating	.015"PP 2.5g (max) 5-2000 Hz
	storage	.030"PP 5g (max) 5-2000 Hz
Shock	operating	30g 11 msec duration
	storage	50g 11 msec duration
Electrical		
EXM-18-422	maximum	+5V @ 1 A
	typical	+5V @ 700 mA
EXM-18-232	maximum	+5V @ 600 mA
	typical	+5V @ 400 mA

* Upper temperature limit degrades 2 C. per 1000 Ft. elevation. Maximum elevation 10,000 Ft.

This page intentionally left blank.

CHAPTER 2

INSTALLATION

Before installing your EXM-18, you should unpack and inspect it for shipping damage.

- Do not remove the module from its anti-static bag unless you are in a static-free environment. The EXM-18, like most other electronic devices, is susceptible to esd damage. ESD damage is not always immediately obvious, in that it can cause a partial breakdown in semiconductor devices that might not immediately result in a failure.
- Ensure that the installation process as described herein is also performed in a static-free environment.

INSERTION IN AN EXM CARRIER

Insertion of the EXM-18 into an EXM carrier is straightforward. Remove a blank EXM panel from the carrier (by unscrewing the thumbscrews) and insert the EXM-18 into the card guides. Firmly press the EXM-18 front panel to ensure that the module is properly seated in the subplane and secure it with the thumbscrews.

- Make sure that power to your system is off. The EXM is not designed to be inserted or removed from a live system.
- When inserting the EXM, avoid touching the circuit board, and make sure the environment is static-free.
- Insert it with adequate continuous force rather than tapping or hammering on it.

CONFIGURING THE BIOS SETUP

The EXM configuration data in the EPC to which the EXM-18 is connected needs to be modified to recognize and enable the card and select from the available options. Follow the instructions in the EPC reference manual for your specific EPC model to invoke the BIOS setup function. This is typically done by pressing the CTRL-ALT-ESC keys simultaneously. EPC system configuration procedures differ slightly depending on BIOS versions.

Enabling the EXM module

Once in the setup program, a menu will be displayed specifying which function keys are available for further configuration. Press the designated function key to invoke the EXM menu. The screen looks something like:

EXM Setup Screen			
Slot	ID	OB1	OB2
0	DD	FD	00
1	FF	00	00
2	FF	00	00
3	FF	00	00
4	FF	00	00
5	FF	00	00


This displays the EXM configuration data (in hexadecimal) stored in nonvolatile memory which the EPC uses at power-up to recognize and configure each installed EXM. The displayed data shows SLOT, ID, OBI and OB2. These are defined as follows:

SLOT indicates the slot in which the EXM is installed. See the diagram below to determine which slot the EXM occupies.

ID is a hard-wired ID value. Each EXM has a unique ID value.

OBI/OB2 are two bytes of option information.

Note that all slots are listed even if the system configuration does not have all the possible EXM slots. All slots not occupied by an EXM module should show an ID of FF and OBI/OB2 of 00 00 indicating that no EXM is present.

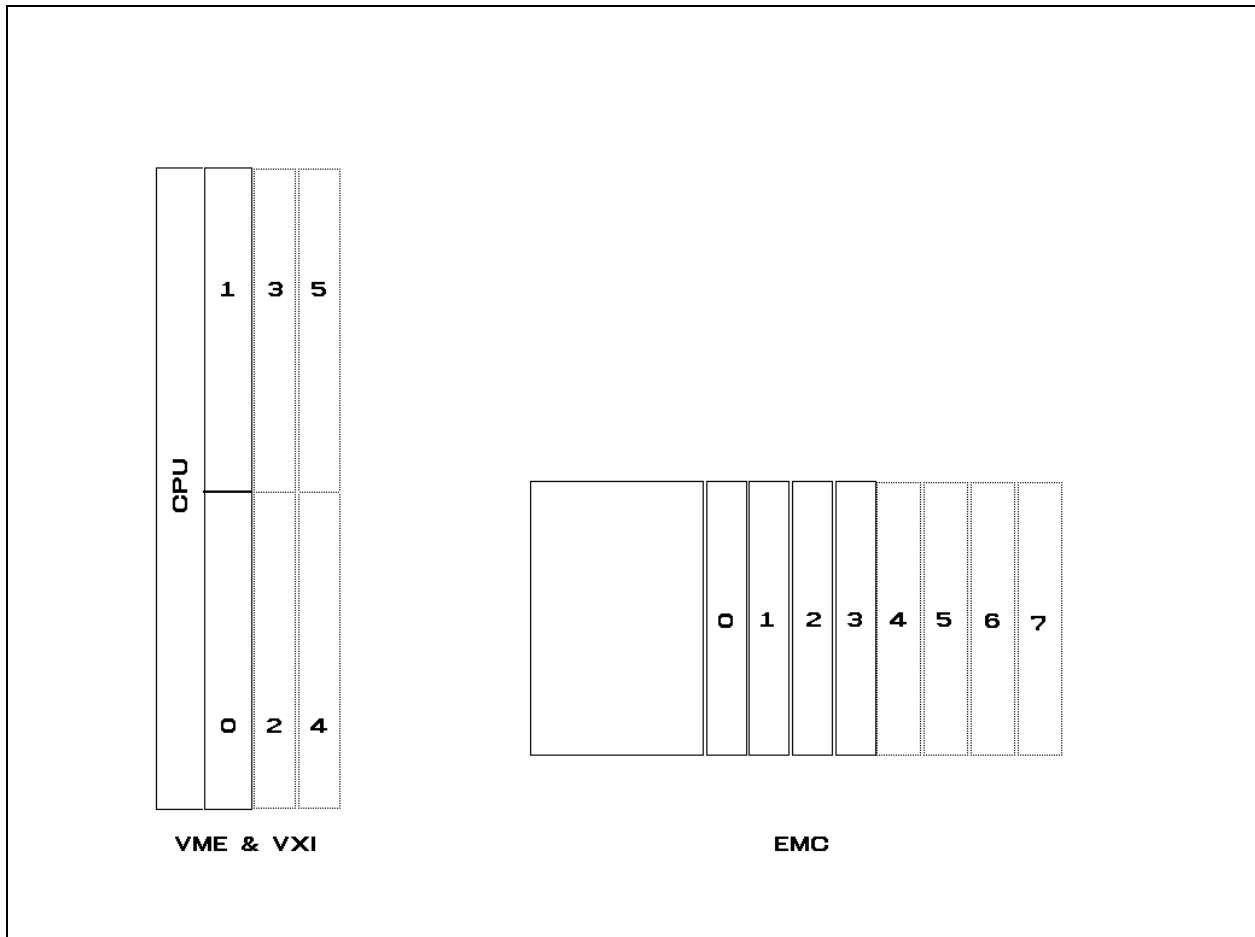

To add or change an EXM configuration, use the cursor keys (arrows) to move between the fields on the screen. Move the cursor to the appropriate slot entry and type in the correct value.

The ID for the EXM-18 should be set to DD.

OBI is a hexadecimal value derived by combining the following:

RTS Gate Enable (bit 7)	Parallel port I/O select (bit 6)	Parallel port base address select (bit 5)	Serial port interrupt select (bits 4 & 3)	Serial port base address (bits 2 & 1)	EXM-18 card enable (bit 0)
RS232 - x - don't care RS422 - 0 - disabled 1 - enabled	0 - input 1 - output	0 - 278, IRQ5 1 - 378, IRQ7	00 - none 01 - IRQ3 10 - IRQ4 11 - IRQ2	00 - none (disabled) 01 - 2F8 10 - 3E8 11 - 2E8	0 - disabled 1 - enabled

For example, a typical OBI value is FDh (1111101) indicating RTS gate enabled, the parallel port is set for output, the parallel port is set for a base address of 378h, IRQ7. The serial port is set to IRQ2, 3E8 (COM3) and the card is enabled.

RTS Gate enable - This bit has no effect on the RS-232 version. For the RS-422 version, when this bit is set (1) the 422 port is enabled for output only when RTS is asserted. This bit should be set (1) for RS-423 multi-drop applications. When clear (0), outputs are always enabled.

Parallel port I/O select - The parallel port is not simultaneously bi-directional. When this bit is set (1), the port is configured for output, when clear (0) the port is set for input.

Special Note:

To allow the parallel port to be used for input, the direction bit (bit 5 of register 2) on the 16C452 must also be programmed for input. To program this bit, read register 2 (addressed at parallel port base address + 2). Next OR the data with 10h. Then write the data out to the same address.

Since the parallel port defaults to output at power-up, this will have to be done after each hardware reset (power-on, front panel reset, loss of power reset, etc.).

Parallel port base address select - The standard PC architecture defines the parallel port base address and interrupt levels together. Therefore one selection sets both. If LPT1 already exists in the system, this bit must be clear (0) so the interrupt and base address of this port do not conflict with the existing LPT1. When using DOS, whichever port is found first during power-up will be assigned the alias LPT1 and the second parallel port found will be assigned LPT2. Unlike serial ports, the base address does not determine which port is assigned which alias. At power-up, the system will check the motherboard (CPU) first, then check each EXM slot starting at slot 0.

Serial port interrupt select - These bits determine which hardware interrupt level the serial port will use. Keep in mind that COM1 is IRQ4 and COM2 is IRQ3. These bits should be set to not conflict with any other port in the system.

Serial port base address - These bits determine which base address the serial port will respond to. 00 indicates that the serial port is disabled. Like all standard PCs, serial port aliases (COM1:, COM2:, etc) are determined by the base address. These bits should be set so that the base address of this serial port does not conflict with other serial ports in the system. COM2 is at 2F8h, COM3 at 3E8h, and COM4 at 2E8h.

Card enable - This bit determines whether the EXM-18 will be enabled or disabled at power-up.

OB2 is not used by the EXM-18 and should be set to 00.

CHAPTER 3

OPERATION

The EXM-18 provides both a standard 25-pin parallel port and a 9-pin serial port, either RS-232 or RS-422. Both ports are implemented using a single VLSI VL16C452 chip. The VL16C452 provides two serial channels, channel 0 and channel 1. Channel 0 is not used. The serial port on the EXM-18 is wired to channel 1.

This chip does not support HDLC and SDLC protocols. For detailed programming information, see the VLSI Technology data manual.

The driver chips used are National Semiconductor DS3691M.

The RS422 version uses 100 ohm, line to line termination.

The input clock speed is set at 1.8432 MHz. This provides baud rates based on the following divisors:

Desired Baud rate	Divisor used	Desired Baud rate	Divisor used
50	2304	2000	58
75	1536	2400	48
110	1047	3600	32
134.5	857	4800	24
150	768	7200	16
300	384	9600	12
600	192	19200	6
1200	96	38400	3
1800	64	56000	2

CONNECTORS

The parallel port is a standard DB-25 with the pin-out defined as:


Pin	Signal	Pin	Signal
1	Strobe	14	Auto line feed
2	DB0	15	Error
3	DB1	16	Initialize printer
4	DB2	17	Select in
5	DB3	18	Signal ground

6	DB4	19	Signal ground
7	DB5	20	Signal ground
8	DB6	21	Signal ground
9	DB7	22	Signal ground
10	Acknowledge	23	Signal ground
11	Busy	24	Signal ground
12	Paper end	25	Signal ground
13	Select		

The Serial port is a Micro-D 9-pin female connector. The mating connector is an ITT Cannon MDSM-9SC-ZII male connector or equivalent. The pin-out for each version of the serial port is shown below.

RS-232 version:

Pin	Signal	Pin	Signal
1	CD	6	DSR
2	RxD	7	RTS
3	TxD	8	CTS
4	DTR	9	RI
5	Gnd		

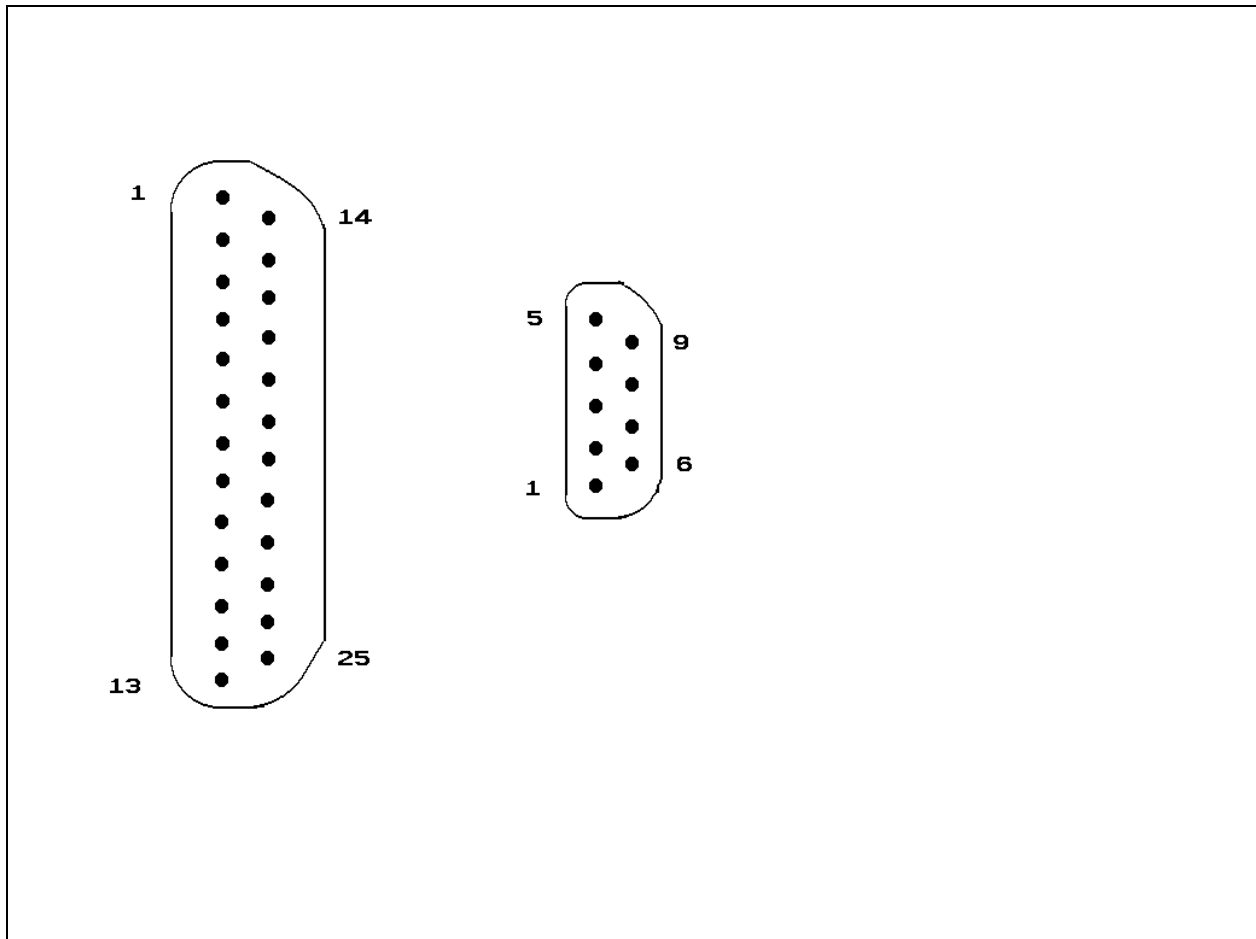

RS-422 version:

Pin	Signal	Pin	Signal
1	Gnd	6	CTS -
2	RTS+	7	CTS+
3	RTS-	8	RxD+
4	TxD+	9	RxD-
5	TxD-		

This page intentionally left blank.

BUG REPORT

While we have tried to assure this manual is error free, it is a fact of life that works of man have errors. We request you to detail any errors you find on this BUG REPORT and return it to us. We will correct the errors/problems and send you a new manual as soon as available. Please return to:

Industrial Computer Source

Attn: Documentation Department

P. O. Box 23058

San Diego, CA 92193

Your Name: _____

Company Name: _____

Address: _____

Address: _____

City: _____ State: _____ Zip: _____

Phone: (____) _____

Product: **EXM-18**

Manual Revision: **41417-142-01A**

Please list the page numbers and errors found. Thank you!